QUICK SETUP

Model: HT-S4100



Thank you for purchasing this product.

This quick setup sheet shows the typical hookup method for connecting speakers and AV components (DVD player, TV, cable/satellite receiver). For more detailed hookup information and operating instructions, please see the Instruction Manual.

First of all, turn on speaker set A.

Press the SPEAKERS [A] button on the front panel. Make sure that speaker indicator A is shown on the display.

Turn off speaker set B when not in use. Indicator should be off.





On the front panel



On the display

Speaker Set A Layout (Main Room)

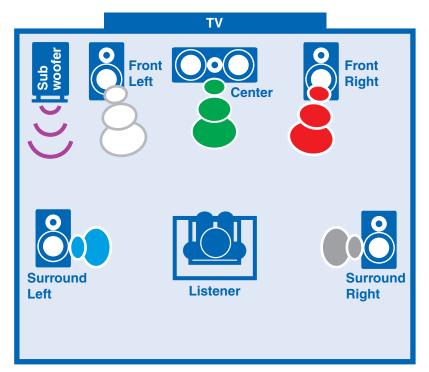

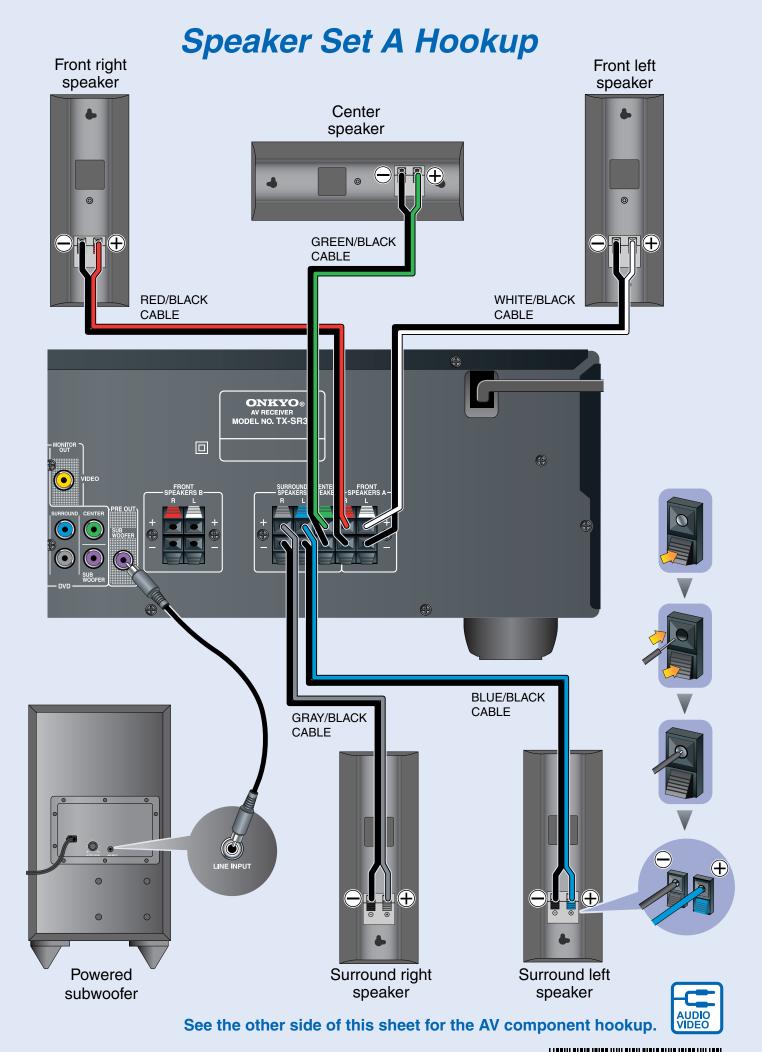




AV Component Hookup



A TV, DVD player, and cable/satellite receiver is used in this hookup example. See the Instruction Manual for how to connect other types of components.

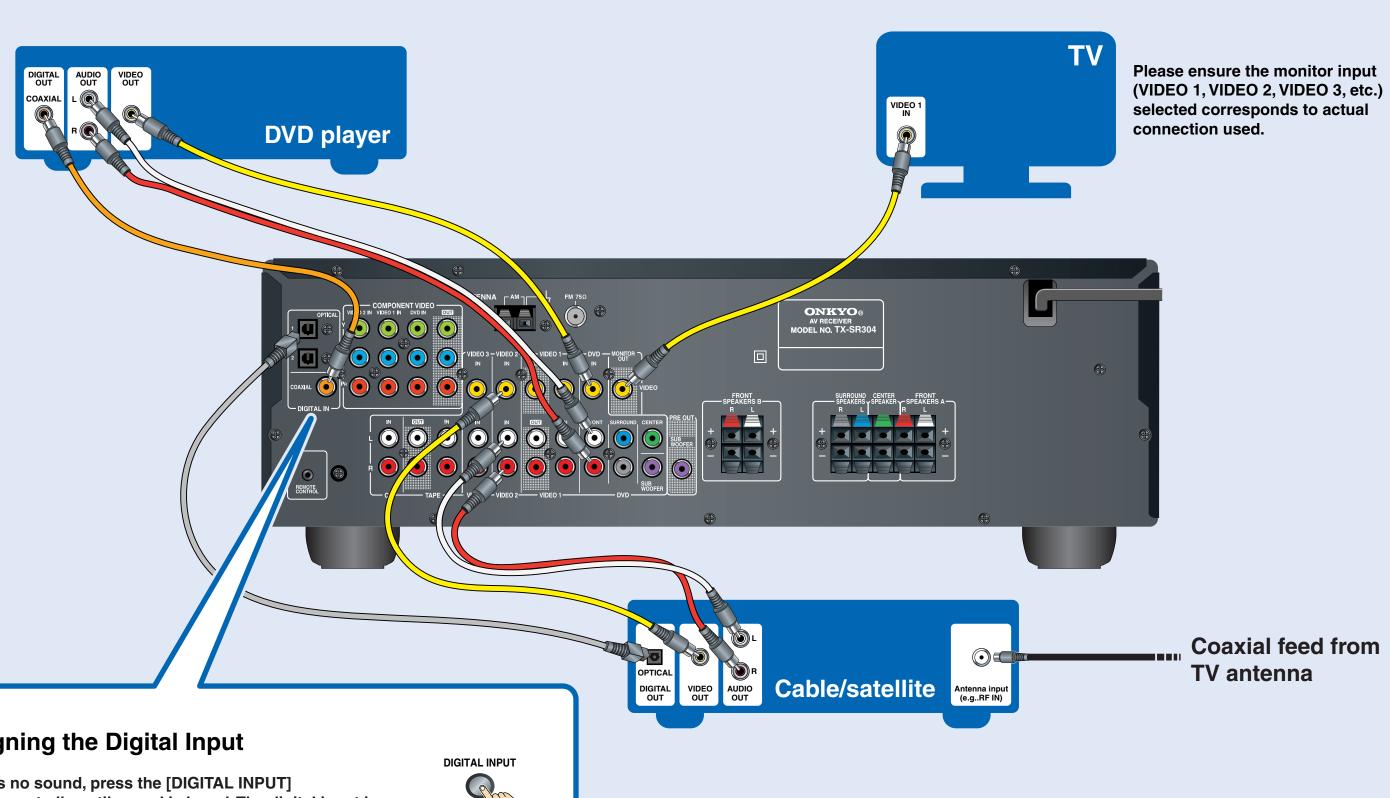

Assigning the Digital Input

If there's no sound, press the [DIGITAL INPUT] button repeatedly until sound is heard. The digital input is now properly assigned.

If you connect your DVD player to the AV receiver's **COAXIAL DIGITAL IN, and your cable/satellite receiver** to the OPTICAL 1 DIGITAL IN, as shown, it's not necessary to assign the digital input.

On the front panel

See the other side of this sheet for the Speaker hookup.

