

QUICK SETUP

Model : HT-SR600




Thank you for purchasing this product. This quick setup sheet shows the typical hookup method for connecting speakers and AV components (DVD player, TV, cable/satellite receiver). For more detailed hookup information and operating instructions, please see the Instruction Manual.

First of all, turn on speaker set A.

Press the SPEAKERS [A] button on the front panel. Make sure that speaker indicator A is shown on the display.

Turn off speaker set B when not in use. Indicator should be off.

A SPEAKERS B

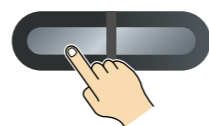


On the front panel




On the display

Speaker Set A Layout (Main Room)

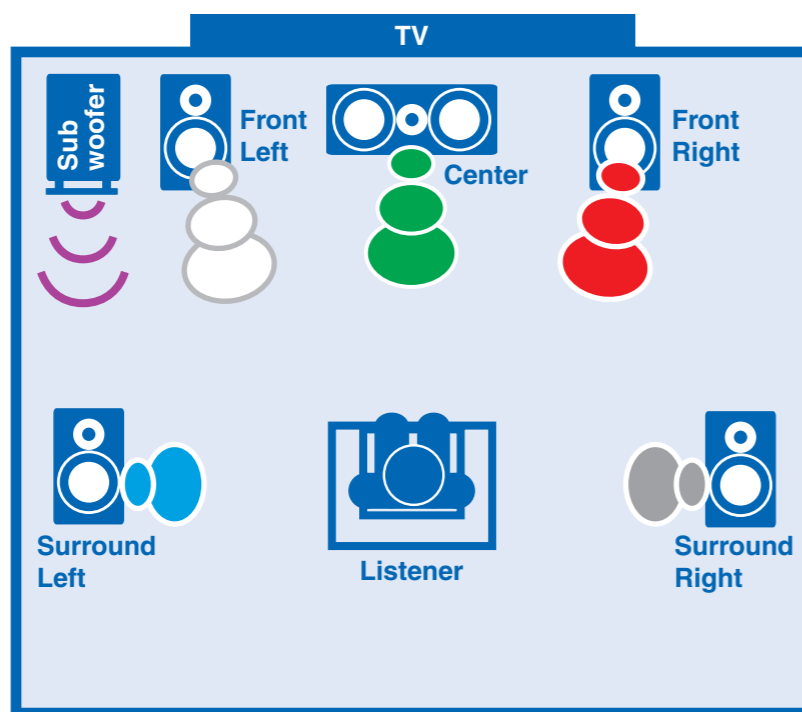


Speaker Set A Hookup

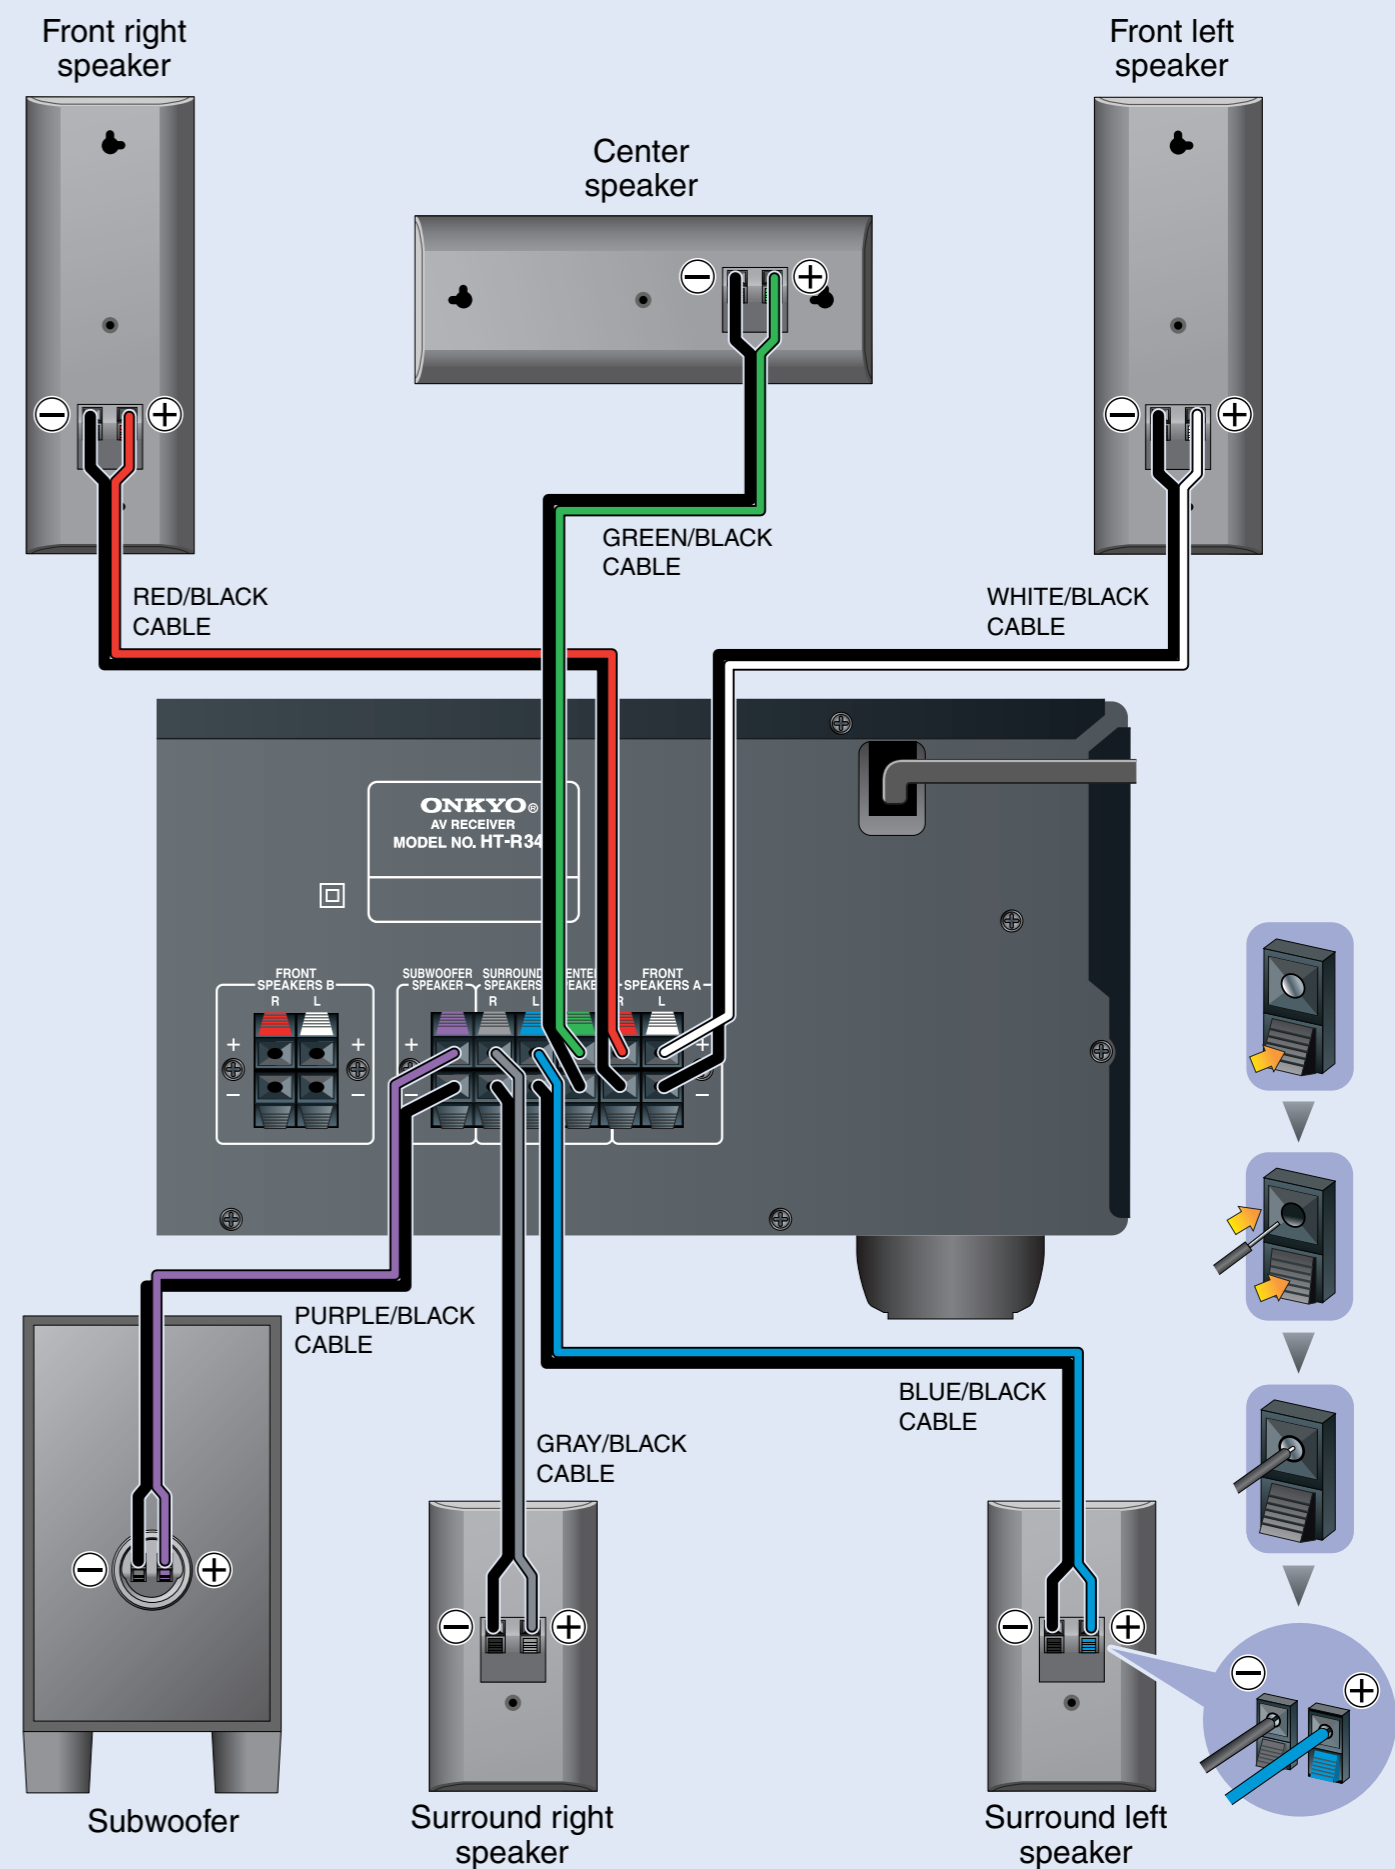


See the other side of this sheet for the AV component hookup.




AV Component Hookup

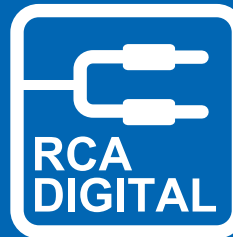



A TV, DVD player, and cable/satellite receiver is used in this hookup example. See the Instruction Manual for how to connect other types of components.

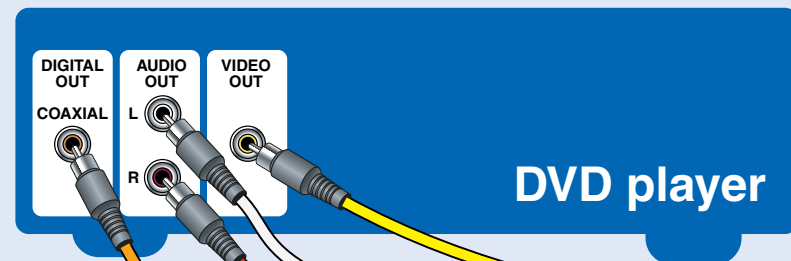

DVD player

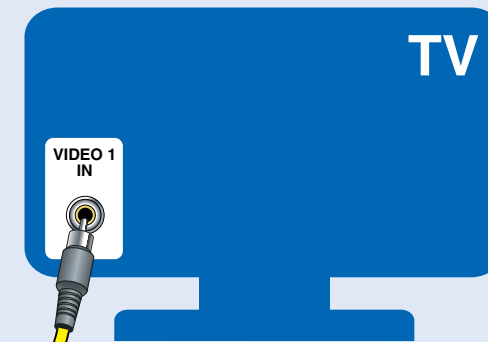

Please ensure the monitor input (VIDEO 1, VIDEO 2, VIDEO 3, etc.) selected corresponds to actual connection used.

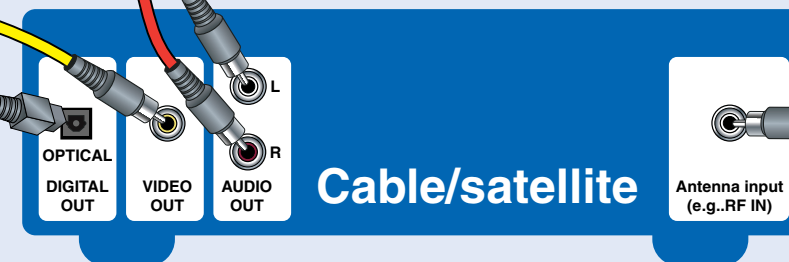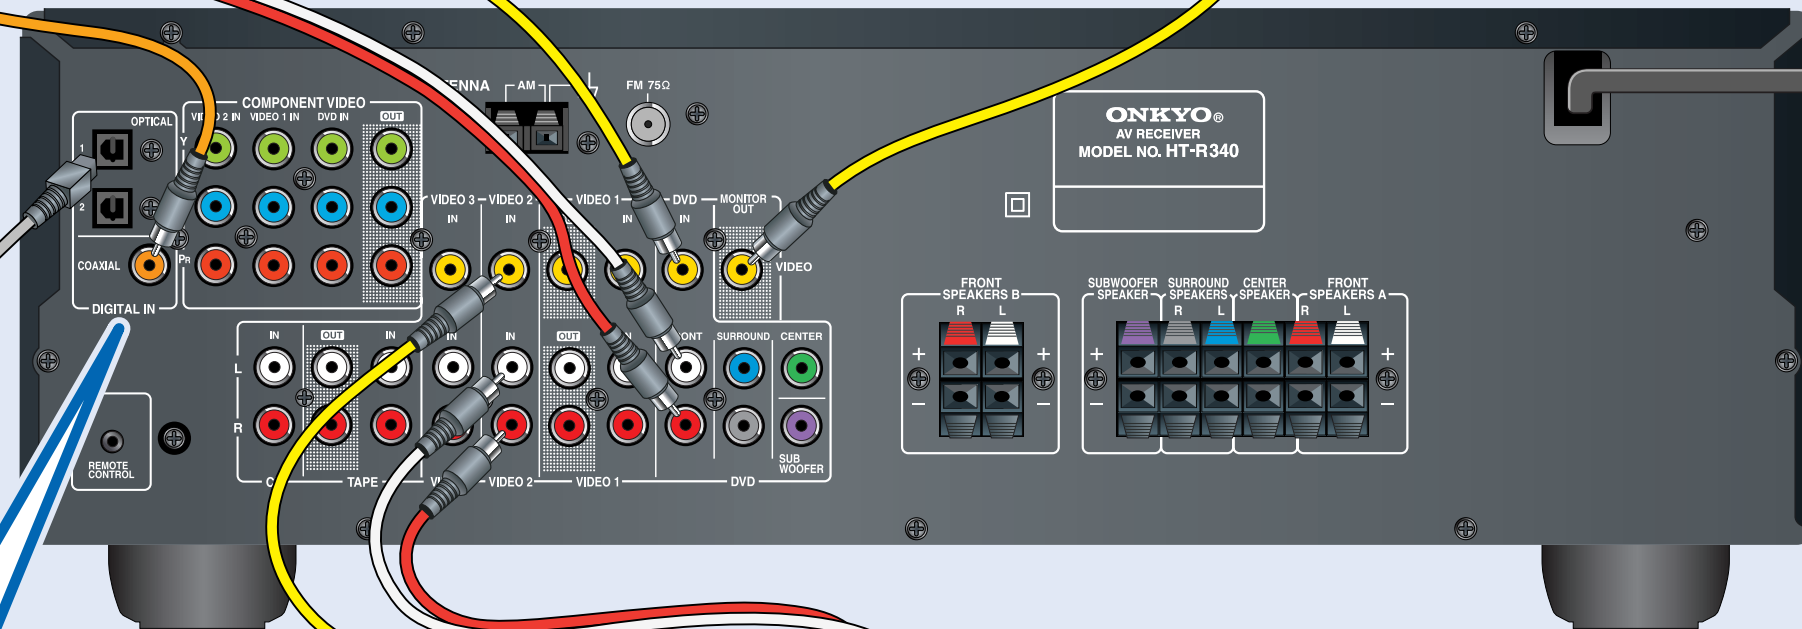

Cable/satellite

Coaxial feed from TV antenna

Assigning the Digital Input

If there's no sound, press the [DIGITAL INPUT] button repeatedly until sound is heard. The digital input is now properly assigned.
If you connect your DVD player to the AV receiver's COAXIAL DIGITAL IN, and your cable/satellite receiver to the OPTICAL 1 DIGITAL IN, as shown, it's not necessary to assign the digital input.

DIGITAL INPUT



On the front panel

See the other side of this sheet for the Speaker hookup.

